

eela-audio

EA816

Telephone Hybrid

Mobile telephone hybrid



User manual

EA Broadcast / Eela Audio, Het Riet 8 A, 5431NM Cuijk, The Netherlands
<http://www.eela-audio.com> e-mail: sales@eela-audio.com

WARNING

Do not expose this appliance to rain or moisture. To reduce the risk of electrical shock, do not remove cover. There are no user-serviceable parts inside. Do not attempt to repair the unit yourself; this voids the right of warranty. Refer servicing to qualified personnel.

CE-Product

This product is in conformity with the requirements of the CE directives.



This product should only be installed and used in installations as specified in this manual and should only be used with the ancillary equipment and options and in the right environment according to the recommendations.

The supplier will not take any responsibility of damage to or induced by this product caused by using the equipment in any not specified application or connecting items or equipment, in any way or environment other than specified.

 
General Information

Cleaning

Clean the outside of this product with a soft cloth. Do not use any cleaning detergents like alcohol, white spirit or ammonia based fluids to clean this product. This can severely damage the finish of the product.

For waste separation:

At the end of the lifecycle of this product dispose it in accordance with local procedures for disposal of hazardous or chemical waste. Do not dispose the unit or batteries in the ordinary way, but if possible hand it in as Small Chemical Waste.



Thank you for the purchase of this *EA816 GSM Hybrid*. First read this manual carefully before starting to use the apparatus. Please keep this manual so you can refer to it at a later stage. Information in this manual may change with product revisions.

INDEX

General information	4
Applications	5
Connections and installation	6
Front panel controls	7
Operation	8
Special functions	9
Basic settings	10
GPIO pinout	12
Specifications	13

*** Indicating changes in operation with version 2.0**

Eela Audio EA816 GSM hybrid:

GENERAL REMARKS:

The EA816 is a stationary telephone hybrid for the GSM network. It is an industrial quality quad band GSM module with AMR-WB codec and the facilities for use as a broadcast hybrid.

For use in areas without cabled telephone connections.

To make use of the new HD-voice (Advanced Multi-rate - Wide-band) facilities more and more mobile telephone companies are offering. The audio bandwidth is extended from 50 Hz to 7 kHz for a crystal clear sound, ideal for the radio reporter in combination with the S25 Reportophone.

Depending on your network provider and system used it can be a huge money saver. In a lot of countries a call from mobile to mobile is much cheaper than from mobile to fixed or visa versa.

Facilities for broadcast applications include remote control on GPIO. For special applications the unit has an auto answer and auto disconnect mode as well as a switch that can be operated from the dial pad of a remote telephone. An external switch can also be connected to the unit to dial the number stored in pos 1 of the memory.

HD-VOICE:

HD Voice based on AMR-WB (Adaptive Multi Rate) Wide-band technology provides enhanced audio quality up to 7 kHz bandwidth on mobile networks. This system is being rapidly implemented by various telecom providers. A large number of phones including Nokia, Samsung, HTC and LG have the codec installed. Also our S25 Reportophone will do fine. With improved sound quality (and low cost) within a reliable network, this system is ideal for reporting purposes. More information about availability in your country can be found on the website of the Global mobile Suppliers Association (GSA) www.gsacom.com.

The system is automatically activated when both devices are equipped with such a codec. The EA816 offers the solution on the studio side: An industrial quality GSM module in a half 19" housing for fixed installation. The EA816 will interface to the studio mixing desk as a regular hybrid including balanced audio input and output and opto isolated GPIO for control.

The unit is housed a 1 U half 19" rack unit. Rackmount kits are available as an option.

Please note:

The SIM card used should not have a PIN code other than pin code 0000!

This is done to avoid several problems involved with PIN codes, amongst others to make the unit restart automatically after a power shut off.

Additional information can be found on the internet: <http://www.eela.nl/EA816>

Quick start manual

Half 19" GSM telephone hybrid with built-in industrial quad band GSM module.



APPLICATIONS:

The Eela Audio EA816 is designed for use with modern radio and television broadcast systems. With the AMR-WB or HD-voice system you can make optimum use of the up to 7 kHz bandwidth of course depending on availability in your network. In a lot of countries telephone calls from mobile to mobile are also much cheaper than from mobile to landline.

The "auto-answer" mode and GPO switch makes the unit suitable for all kinds of remote applications.

A technician can listen in and by means of the remote switch reset an automatic broadcast or start an emergency player.

A reporter can dial in, listen to a suitable point in the broadcast, interrupt the program by means of his telephone keypad, make his report and switch back to the unattended automatic program.

In combination with PA systems: In large event halls it can sometimes be easy for staff to do an announcement using a mobile phone. Simply dial a phone number and use the keypad to turn off the background music and make the announcement.

For use as a backup for an STL or other similar audio connections.

IMPORTANT:

To avoid several problems involved with PIN codes, amongst others to make the unit restart automatically after a power shut off, you can only use SIM cards with pin code 0000.

CONNECTIONS AND INSTALLATION:

BACK PANEL CONNECTIONS:



SEND: On XLR type connector the balanced line input of the unit.

Left of this connector is a small screw of a ten-turn potmeter to adjust the 'send' gain.

RECEIVE: On XLR type connector the balanced line output.

Left of this connector is a small screw of a ten-turn potmeter to adjust the 'receive' gain.

These send input and output levels are factory adjusted for +6 dBU.

GPIO: D-9 female connector to interface with most radio broadcast mixing desks.

HEADSET: RJ-11 connector for a standard telephone handset or headset for local operation.

SIMCARD: Slot for a standard SIM card, push in- push out type. Place the SIM card with the contacts facing towards the bottom of the unit. The bevelled side first.

Make sure to use a SIM card with PIN code 0000.

This way you can quickly change telephone numbers by replacing the SIM card. If the SIM card is changed disconnect and reconnect the power to restart the unit in order to initiate the new SIM.

RF: SMA antenna connector. A standard antenna is delivered with the unit. Under special circumstances e.g. in case the unit is built in a closed metal 19" rack, it may be necessary to use an external, wired, antenna.

POWER: 12 Volts power connector. A suitable wide range adapter is included. Please note there is no power switch on the unit. The EA816 can also be powered from a car battery in case it is used in a mobile reporter unit.

FRONT PANEL CONTROLS:



LIMIT LED: A red LED indicating the internal limiter is activated to prevent overloading the system.

16 Push buttons to control the unit:



ON "Connect" button.



OFF "Disconnect" button. (Push and hold for the set-up menu.) *



BACK key to make correction keying in numbers or returning to a previous state.



PHONES Switches the audio to the headset I/O, when active, disconnects line input / output.

BUTTONS 1..0, #,* to operate the unit as a normal telephone.



DISPLAY: OLED display indicating the status of the unit. It will also display the number of an incoming call. The triangle in the left top corner is an indication of HF signal strength.

OPERATION:

Connect the audio output of the unit (RECEIVE) to the input and the audio input (SEND) to the cleanfeed output of your mixing desk or other system that you will be using. A normal telephone handset can be connected to the RJ10 connector on the back.

Connect the antenna provided by simply screwing on the SMA connector. In case you will be using the unit in a metal housing like a 19" rack the use of an antenna with cable is recommended. A metal housing acts as a Faraday cage resulting in a bad r.f. reception. An antenna with a cable placed outside of the rack will solve this problem.

Switch on the unit by connecting the power adapter delivered with the unit. (or use a suitable 12V 1A power source). After a few seconds the unit will be ready to use.

If no SIM card is placed or a SIM card with another PIN code as "0000" a message will be displayed:



Place a suitable SIM card in the slot and switch off and on the unit by removing and reconnect the power to restart the unit.

Key-in a telephone number and press the  ON "Connect" button to make a call.


You can store up to 10 telephone numbers in non volatile memory by press and hold " # " followed by one of the numeric keys.*



To recall one of the stored telephone numbers press and hold " * " followed by one of the numeric keys.*




INCOMING CALL

An incoming call is indicated by a blinking green  ON "Connect" button and the telephone number of the caller will be displayed. Answer the call by pressing this button. In auto answer mode the display will indicate "connect".

To end a call press the  OFF "Disconnect" button.

LOCAL OPERATION

The audio is either routed to the main input and output or to the headset. You can connect the audio I/O to the headset by pressing the bottom right  headset button. This way you can make a call independently or communicate to a caller off-air. If active a yellow LED underneath the button will light and the loudspeaker icon in the display will change into a headphone icon.

SPECIAL FUNCTIONS:

AUTO ANSWER

The unit can be used in auto-answer mode. As an example this can be used in unattended broadcast applications for your reporter to make his live report on air or in PA applications to make announcements with your mobile phone.

Use the basic settings menu to put the unit in auto-answer mode. The following message will appear in the display.*



Press "1" to put the unit in auto-answer. Note the change of the telephone icon in the right-top corner of the display. The auto-answer mode is indicated by a lifted handset in the icon. Once in auto answer the unit will stay this way. This mode is stored in non-volatile memory also after a power interrupt.


Use the basic settings menu to switch off the auto answer function.*

If a connection is lost or the caller ends, the unit will auto disconnect and reverts to stand-by again.

DISABLE HEADPHONE KEY

To prevent accidental use of the headphones monitoring key this can be disabled:



To disable this key press and hold the  button and the above message will appear. Press "0" to disable the monitor key or press "1" to enable it again.

REMOTE CALL

The telephone number stored in position 1 in memory can be called by a remote contact. A simple switch connected to pins 2 and 6 on the remote connector will dial the number.

REMOTE CONTACT

The EA816 also has a remote operated electronic contact. Between pins 3 / 7 of the I/O connector is an opto isolated switch. A caller can operate this switch by pressing "1" to switch this on and "0" to switch off on the dial pad of his phone.

Please note that the switch will stay active even if the call is ended. You can de-activate it by calling again and press "0".

Wired correctly to a mixing desk a reporter can listen to the current broadcast to find a suitable pause, press "1" to interrupt the radio automation system, make his announcements and restart the automation again by pressing "0".

BASIC SETTINGS: (Version 2.0)

To enter the settings mode push and hold the  OFF "Disconnect" button and the setup window will appear:*



You can scroll through the various settings with the  ON "Connect" and the  OFF "Disconnect" buttons. To exit scroll to this window again and press #. The available options are:


NETWORK SWITCHING:



Select "1" to force the unit to stay in GSM mode, press "2" to use 3G only or "0" to auto select. Unless required by special circumstances AUTO mode is recommended as the unit will dial and connect but no audio will be passed!

IN CASE THE NETWORK SWITCHING IS FORCED TO 3G (Mode 2) THE UNIT WILL OPERATE IN 3G MODE ONLY!


ECHO CANCELLING:

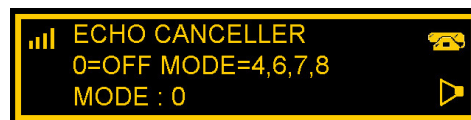

A built-in echo canceller is available. In a normal broadcast operation a N-1 (cleanfeed) system will be available. In that case the echo canceller can be switched off (MODE : 0) and will give you the best available audio quality. In applications without a N-1 system or when used in combination with open microphones and loudspeakers you can select one of the following settings for best audio quality vs echo suppression:

- 4 normal echo cancelling recommended for use with loudspeakers
- 6 aggressive echo cancelling
- 7 medium processing
- 8 least aggressive processing

 AUTO ANSWER:



The auto-answer mode is indicated by a lifted handset in the icon.

DISABLE HEADPHONE KEY:



To prevent accidental use of the headphones button, see also page 9.

NOISE SUPPRESSION:



The EA816 has a built-in active noise filter. Standard this filter is switched on but sometimes can be heard. So this setting can be used to switch this filter off or on depending on requirements.

AMR/WB CODEC:



The codec can be set to mode 0, AMR which offers a frequency response of max 200 Hz to 3400 Hz. Mode 1, the wideband AMR/WB offers a frequency response of 75 Hz up to max. 6,4 kHz.

REMOTE CONTROL:



Changes the behaviour of the remote control connector. Select CONT in case you are using a fader contact (or similar). The unit switches ON (Off hook) when the contact is closed and OFF when the contact is opened.

In Pulse you can connect 2 different switches for ON and OFF. Please note the pinout of the D9 connector changes and the possibility to remotely dial the first stored number will not be available.

SETTINGS:

All settings are stored in non-volatile memory automatically. To exit the settings menu scroll back to:



and press # to exit.

REMOTE CONTROL

Like the EA815 and EA915 telephone hybrids the EA816 can be controlled from a suitable broadcast mixing desk. Available functions depend on the settings in the REMOTE CONTROL menu:

Ring detect, a remote output contact to indicate an incoming call. Pin 5/9 RING+ / RING-

Depending on settings: Remote on, a remote input to answer a call from the desk with pfl switch and/or a fader contact.

Pin 4/8 ON+ / ON-

or

Pin 4/8 PULSE ON+ / PULSE ON-

Remote control contact to operate by the caller. Pin 3/7, REM+ / REM-

Depending on settings: Remote call, momentary closing of the contacts between pin 2 and pin 6 will initiate a call using the telephone number stored in memory position 1. (Settings menu CONT)

or

PULSE OFF+ PULSE OFF- in case the remote mode is set to "PULSE" in the settings menu

REMOTE MODE CONTINUE:

A contact closure between pins 4-8 will switch the unit ON (off hook) and opening the contact will end the call.

A momentary contact closure between pins 2-6 will switch the unit off hook and start dialling the first stored telephone number.

	I/O REMOTE
PIN	SUB-D 9P FEM.
1	SCREEN
2-6	REM CALL+ / REM CALL-
3-7	REM + / REM-
4-8	ON+ / ON-
5-9	RING+ / RING-

REMOTE MODE PULSE:

A momentary contact closure between pins 4-8 will switch the unit ON (off hook).

A contact closure between pins 2-6 will end the call.

	I/O REMOTE
PIN	SUB-D 9P FEM.
1	SCREEN
2-6	PULSE OFF+ / OFF-
3-7	REM + / REM-
4-8	PULSE ON+ / PULSE ON-
5-9	RING+ / RING-

D-9 hybrid remote connector.

SPECIFICATIONS:

Connections are "industry standard":

Input:

Balanced Line input, XLR female Pin 1 gnd; pin2 +; pin3 –

Output:

Balanced Line Output, XLR male Pin 1 gnd; pin2 +; pin3 –

Headphones (back) RJ10

Dual-Band UMTS/HSDPA 900/2100MHz

Quad-Band GSM/GPRS/EDGE 850/900/1800/1900MHz

Output power: UMTS 850/1900: 0.25W; UMTS 900/2100: 0.25W; GSM850/GSM900: 2W;
DCS1800/PCS1900: 1W

Power supply: 12V DC, approx 1A (peak).

Our products and also this EA816 are subject to a constant process of further development and improvement and also the firmware is under constant development. As a result information in this manual may change with product revisions.

IMPORTANT:

NETWORK SWITCHING:

IN CASE THE NETWORK SWITCHING IS FORCED TO 3G (Mode 2) THE UNIT WILL OPERATE IN 3G MODE ONLY!

PIN CODE:

To avoid several problems involved with PIN codes, amongst others to make the unit restart automatically after a power shut off, you can only use SIM cards with pin code 0000.

EA BROADCAST / EELA AUDIO
www.eela-audio.com